Tremco LR Adhesive

Solvent-Free, Fast Setting, Fleece-Back Membrane Attachment

FEATURES

BENEFITS

Solvent Free		• VOC free		
		• Low odor • Not flammable		
		· Not nammable		
	2-Component	• Sets in minutes		
	Non-penetrating	• No fastener back out		
	attachment	No corrosion		
		Minimizes installation noise		
	Industry approvals	• FM and UL approved		
DESCRIPTION		wo-component (1:1 ratio), solvent-free, elastomeric urethane adhesive. Tremco ree, extremely low in odor, and does not contain any bitumen or VOC's.		
BASIC USI	ES Tremco LR Adhesive is a membranes to approve	fast-setting, high-performance adhesive used to adhere fleece-back single-ply d substrates.		
APPROV	• Approved Insulations	s (polyisocyanurate, wood fiber, gypsum)		
SUBSTRA				
	Concrete Roof Deck	S		
PACKA	CING Available in dual is in	and contriders act (Ports 1.8.2) at 1.5 L (0.40 col) por set		
FACINA		G Available in dual joined cartridge set (Parts 1 & 2) at 1.5 L (0.40 gal) per set. 4 sets per case for a total of 6L (1.58 gal) per case.		
		is are provided per each case, which are required to properly mix the dual		
	components during			
		sable plastic bags in a corrugated box (Bag-in-Box), for application using the		
	• 5 gal. (18.9 L) F	essure adhesive pump cart. Part A and Part B are shipped together as a set		
	• 5 gal. (18.9 L)			
S	TORAGE Storage Condi	tions: Keep material temperatures above 45°F (7°C) and do not exceed 95°F (35°C)		
		. Keep from freezing. Do not store in direct sunlight.		
		1 year in unopened containers when stored in proper warehouse temperatures and		
	conditions.			
AP		F:		
	Cartridge U	Init: Custom battery powered Applicator is recommended. Hand powered cartridge		
	application	guns are acceptable for use but require smooth even pressure for continuous bead		
	size.			
		bx Pump Cart: A low pressure adhesive pump cart designed to dispense two ent 1:1 ratio low viscosity adhesives. Part A and Part B Components are mixed at the		
		ng gun to apply a single bead of LR Adhesive. Each gun has a 35 foot dual material		
		np is powered with 110 Volt, 60 Hz AC current.		
		CE PREPARATION:		
200 2 308 a.C.S.		al: All work surfaces should be clean, dry, and free of dirt, dust, debris, oils, loose		
		, un-adhered coatings, deteriorated membrane and other contaminants or defects nay result in a surface that is not sound or is uneven.		
	that m	ay result in a surface that is not sound of is uneven.		

Vapor retarder surfaces: temporary roof membranes or vapor retarders consisting of asphalt glaze coated felts or new smooth APP or SBS modified bitumen membranes must

Tremco LR Adhesive

APPLICATION CONTINUED

be primed with Tremprime WB at 200 to 400 ft²/gal (4.9 to 9.8 m²/L). Primer is not required for sand-surfaced SBS membranes.

APPLICATION:

Low pressure pump system: Remove plastic packages from corrugated boxes using pull-tabs. DO NOT USE A KNIFE OR SHARP TOOL! Load Part A plastic package valve side down onto pump tray labeled Part 1 and connect black quick connect fittings. Load box labeled Part B valve side down onto pump tray labeled Part 2 and connect gray quick connect fittings. Note; improper loading can result in cross contamination in the supply lines and pumps and seriously damage the machine. Refer to pump data sheet for complete operating instructions.

Before installing mixing tip hold gun assembly over a waste container and open valves. Allow a small amount of material to run out and ensure 1 to 1 ratio flow of materials. Do not proceed with adhesive installation if flow is not on a 1 to 1 ratio. Close valves and install a small amount of grease on the threaded manifold tip. Install mixing tip.

Open valve and apply ¼"-1/2" wide adhesive beads to the substrate or insulation board in ribbons spaced a maximum 12" o.c. (spacing may need to be adjusted depending on wind uplift requirements). Once the adhesive begins to rise install the fleeceback membrane into the adhesive and roll membrane using a weighted roller. Do not allow the adhesive beads to skin over before placement of the fleece-back membrane. Roll the membrane with a min. 60 lb weighted roller to press the fleece backing into the wet adhesive. Replace mixing tip if the application is delayed for more than 1 minute as the adhesive will cure in the nozzle and prevent proper flow of the material. Note: Mixing tips for cartridge material should not be used with 5 gal. box material.

Battery powered single bead applicator: Snap off the molded cap on the top of the adhesive cartridge and screw on the mixing tip. Make sure mixing tip is tight to prevent adhesive leakage. Install the cartridge into the battery powered or pneumatic single bead applicator. Refer to applicator data sheet for complete operating instructions.

Open valve and apply ¼"-1/2" wide adhesive beads to the substrate or insulation board in ribbons spaced a maximum 12" o.c. (spacing may need to be adjusted depending on wind uplift requirements). Once the adhesive begins to rise install the fleeceback membrane into the adhesive and roll membrane using a weighted roller. Do not allow the adhesive beads to skin over before placement of the fleece-back membrane. Roll the membrane with a min. 60 lb weighted roller to press the fleece backing into the wet adhesive. Replace mixing tip if the application is delayed for more than 1 minute as the adhesive will cure in the nozzle and prevent proper flow of the material. Note: Mixing tips for cartridge material should not be used with 5 gal. box material.

- Do not store in direct sunlight or at temperatures above 95°F (35°C).
- Do not apply when ambient temperatures are below 45°F (7°C)
- Product material temperature must be between 70°F 85°F (22°C 29°C) for 24 hours prior to use.
- Do not apply onto wet or damp substrates.
- Do not puddle or mound the adhesive as this will cause the membrane to rise excessively and lead to an uneven surface.

PROPERTY	TYPICAL VALUE	TEST METHOD
Tensile Strength	Min. 250 psi	ASTM D 412
Density	8.5 lbs./gal.	ASTM D 1875
Peel Adhesion	Min. 17 lbf./in.	ASTM D 903
Flexibility	Pass @ 70°F	ASTM D 816
Flame Spread Index	10	ASTM E 84
Smoke Developed Index	30	ASTM E 84

LIMITATIONS

PHYSICAL PROPERTIES

Tremco LR Adhesive

MAINTENANCE

PRECAUTIONS

TECHNICAL SUPPORT

Your local Tremco Roofing sales representative can provide you with effective maintenance procedures which may vary, depending upon specific conditions. Periodic inspections, early repairs and preventative maintenance are all part of a sound roof program.

Users must read container labels and Safety Data Sheets for health and safety precautions prior to use.

Your local Tremco Roofing sales representative, working with the Technical Service Staff, can help analyze conditions and needs to develop recommendations for special applications.



Roofing & Building Maintenance

www.tremcoroofing.com 3735 Green Road Beachwood, Ohio 44122 1.800.852.6013

50 Beth Nealson Drive Toronto, Ontario M4H 1M6 1.800.668.9879 Tremco Roofing & Building Maintenance is a part of the Tremco Construction Products Group

Tremco is a US Registered trademark of Tremco Incorporated.

Tremco is a US Registered trademark of Tremco Incorporated. The information provided on this data page supersedes all previous data concerning this product and its application. The Statements provided concerning the materials shown are intended solely as a general guide for material usage and are believed to be true and accurate. Since the manner of use is beyond our control, Tremco DOES NOT MAKE NOR DOES IT AUTHORIZE ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE, OR ANY OTHER WARRANTY, GUARANTTE OR REPRESENTATION, EXPRESSED OR IMPLIED, CONCERNING THIS MATERIAL EXCEPT THAT IT CONFORMS TO TREMCO'S PRODUCT SAMPLE. Buyer and user accept the product under those conditions and assume the risk of any failure, injury of person or property and loss or liability resulting from thenanding, storage or use of the product, whether or not it is handled, stored, used in accordance with directions or specifications. UNDER NO CIRCUMSTANCE SHALL TREMCO BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM ANY BREACH OF WARRANTY. IN ALL CASES, TREMCO'S LIABILITY IS UNATED ATTERACO'S DATION TO THE PEPA ACCOMENT OF CONSTANCE SHALL CASES, TREMCO'S LIABILITY IS LIMITED, AT TREMCO'S OPTION, TO THE REPLACEMENT OF GOODS, OR THEIR VALUE, PROVEN TO BE DEFECTIVE IN MANUFACTURING.