




TREMLOCK DOWNSPOUT

OPEN DOWNSPOUT, STYLE 2 DOWNSPOUT STRAP VERSION


INSTALLATION INSTRUCTIONS

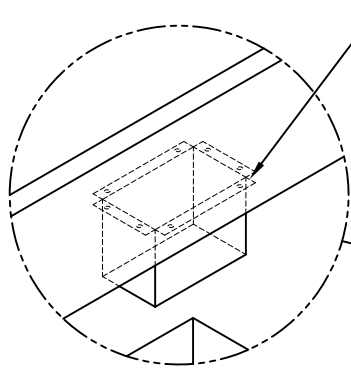

DETERMINE OUTLET LOCATIONS AND FIELD CUT HOLE IN A NEAT WORKMANLIKE MANNER. INSERT ALUMINUM KYNAR OUTLET, FASTEN WITH TWO RIVETS IN EACH FLANGE AND SEAL, WITH NON-CURING SEALANT

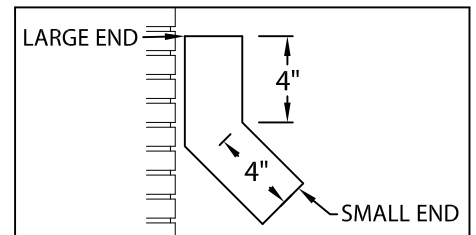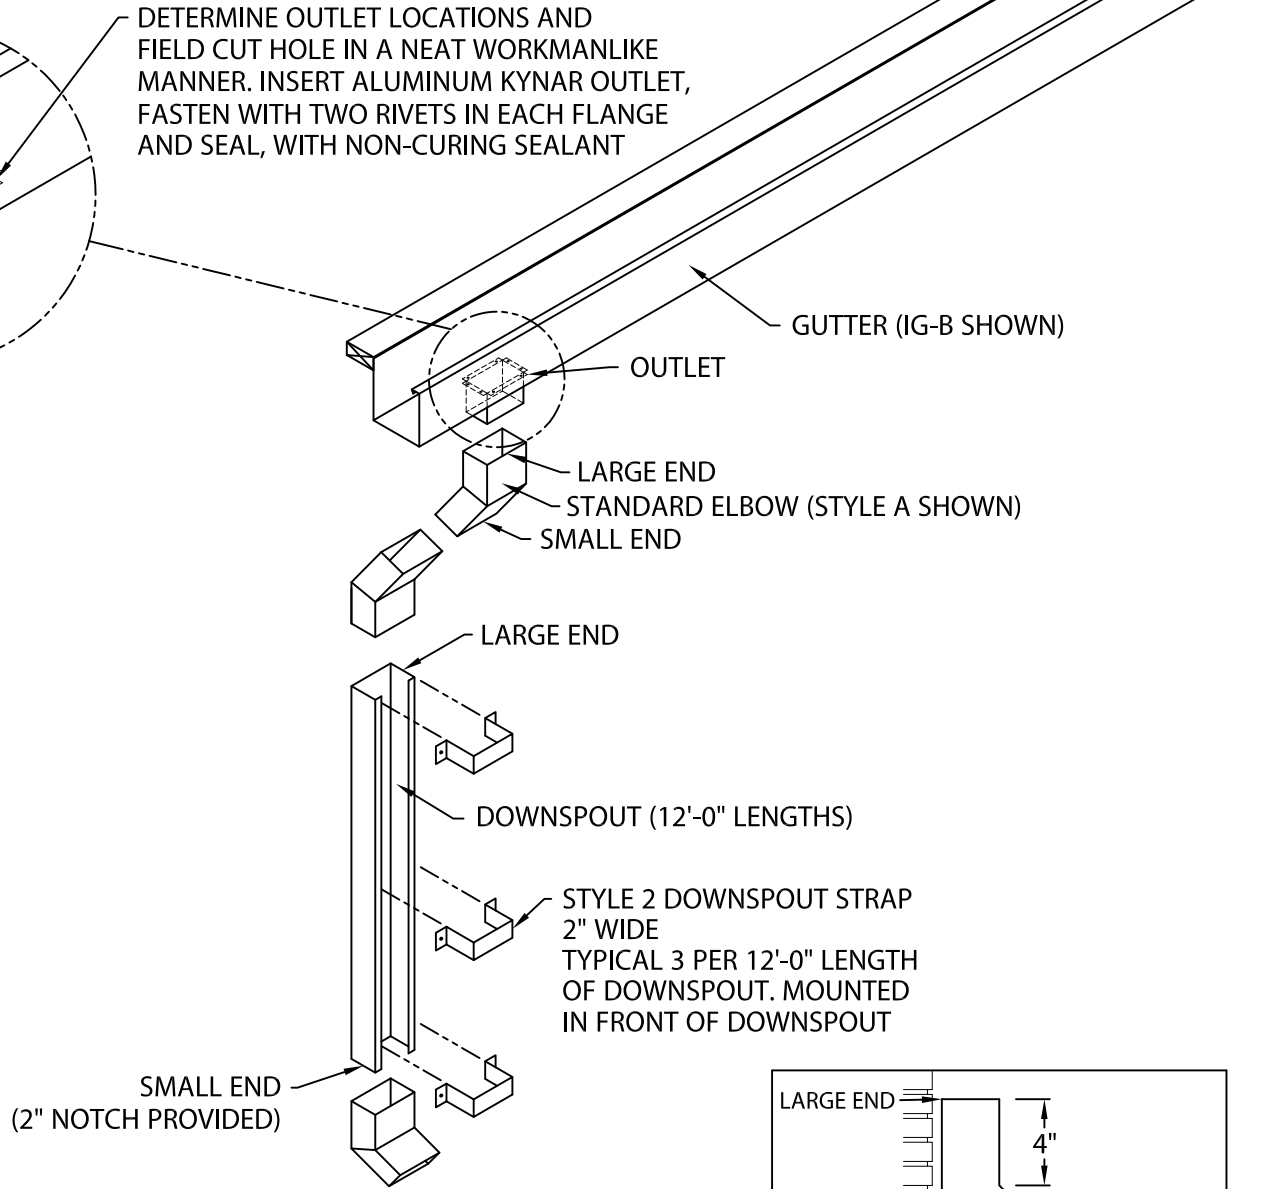

STYLE A DOWNSPOUT

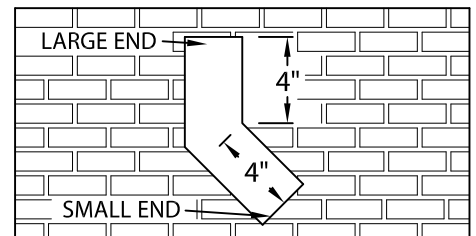

STYLE B DOWNSPOUT



DOWNSPOUT SECTION